

**SURFACE SPEED vs. RPM AND DIAMETER**

A straight line connecting the shaft diameter at the left with the RPM on the right allows user to read shaft surface speed in meters or feet per minute on the middle line.

